


VALVES

Valve clearance should be maintained at 0.08 mm (0.003 in). Excessive clearance will cause noise. Insufficient clearance will cause loss of power and could cause valve damage.

NOTE:

- * Check and adjust valve clearances while the engine is cold. The clearance will change as the temperature rises.

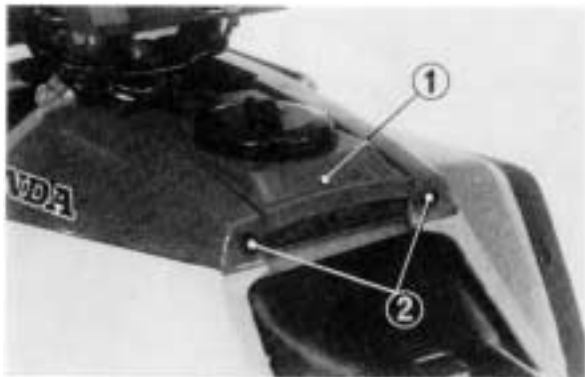


- (1) Fuel tank cover
- (2) Screws

1. Turn the fuel valve OFF and disconnect the fuel line at the fuel valve.
2. Remove the fuel tank cover (1) by removing the two screws (2).
3. Remove the two fuel tank mounting bolts (3) and remove rear fender bolts (4).

⚠ WARNING

- * ***Gasoline is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area. Do not smoke or allow flames or sparks in the area.***

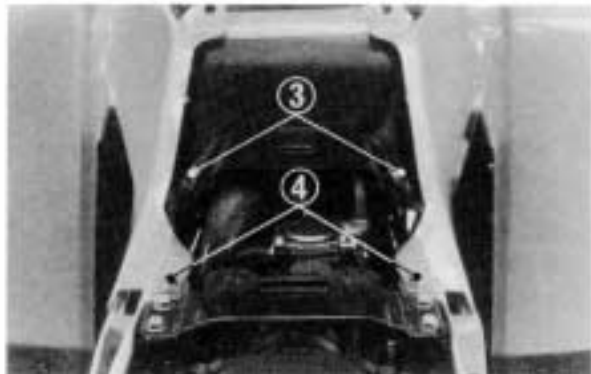

- (3) Tank mounting bolts
- (4) Rear fender bolts