

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)		104
*	BRAKE FLUID	NOTE 3					121
*	BRAKE SHOE WEAR	NOTE 1					132
	BRAKE SYSTEM						121
*	REVERSE LOCK SYSTEM						115
	SKID PLATES, ENGINE GUARD						141
*	CLUTCH SYSTEM						114
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	142
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						134
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.