

## MAINTENANCE AND REPAIRS

### MAINTENANCE SCHEDULE

| ITEMS                               | FREQUENCY | Whichever comes first<br>⇒ | INITIAL     |                      | REGULAR     |                      | Refer to page |
|-------------------------------------|-----------|----------------------------|-------------|----------------------|-------------|----------------------|---------------|
|                                     |           |                            | MAINTENANCE | MAINTENANCE INTERVAL | MAINTENANCE | MAINTENANCE INTERVAL |               |
|                                     |           |                            | mi          | 100                  | 600         | 1200                 |               |
|                                     |           |                            | km          | 150                  | 1000        | 2000                 |               |
| NOTE                                | HOURS     | 20                         | 100         | 200                  |             |                      |               |
| * FUEL LINE                         |           |                            |             |                      | I           |                      | —             |
| * THROTTLE OPERATION                |           |                            |             |                      | I           |                      | 96            |
| * CARBURETOR CHOKE                  |           |                            |             |                      | I           |                      | 101           |
| AIR CLEANER                         | (NOTE 1)  |                            |             | C                    | C           |                      | 97–99         |
| AIR CLEANER HOUSING<br>DRAIN TUBE   | (NOTE 2)  |                            |             | I                    | I           |                      | 100           |
| SPARK PLUG                          |           |                            |             |                      | I           | I                    | 109           |
| * VALVE CLEARANCE                   |           |                            |             | I                    | I           | I                    | 110           |
| ENGINE OIL                          |           |                            |             | R                    | R           | R                    | 104–107       |
| ** ENGINE OIL STRAINER<br>SCREEN    |           |                            |             |                      |             | C                    | —             |
| ** ENGINE OIL CENTRIFUGAL<br>FILTER |           |                            |             |                      |             | C                    | —             |
| * ENGINE IDLE SPEED                 |           |                            |             | I                    | I           | I                    | 101           |

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean      R: Replace

A: Adjust    L: Lubricate