

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to *Break-in Guidelines* (page 176).

For information about carburetor adjustment for riding at high altitude, see page 177.

Safe Riding Precautions	41
Off-Road Use Only	41
Keeps Hands and Feet on Controls	42
Control Speed.....	43
Use Care on Unfamiliar or Rough Terrain.....	44
Do Not Perform Stunts.....	45
Starting & Stopping the Engine	46
Preparation	46
Starting Procedure.....	47
Flooded Engine	50
How to Stop the Engine	50
Using the Recoil Starter	51
Shifting Gears	52
Riding in Reverse.....	54

(cont'd)