

## **If the Battery Is Low (or Dead)**

---

Your ATV will operate even if the battery is low (or dead), as long as the engine is running. If the engine is not running, it may be started using the recoil starter.

1. Shift the shift lever in Neutral position.
2. Apply the parking brake.
3. Turn the ignition switch to the “ON” ( I ) position.
4. Use the recoil starter (page 53 ) to start the engine.

Jump starting is not recommended, especially if you use an automobile battery. The greater amperage of an automobile battery when the car engine is running can damage your ATV’s electrical system.

Bump starting is also not recommended.

If you can’t charge the battery or it appears unable to hold a charge, contact your Honda dealer.