

SKID PLATES

The skid plates (Fig. 4-34) protect the frame/lower arm, the drive components and the rear brake. Check the plates for cracks, damage or looseness at the intervals shown in the **Maintenance Schedule**.

Have the skid plates replaced if they are cracked or damaged. If the plate bolts are loose, tighten them securely.

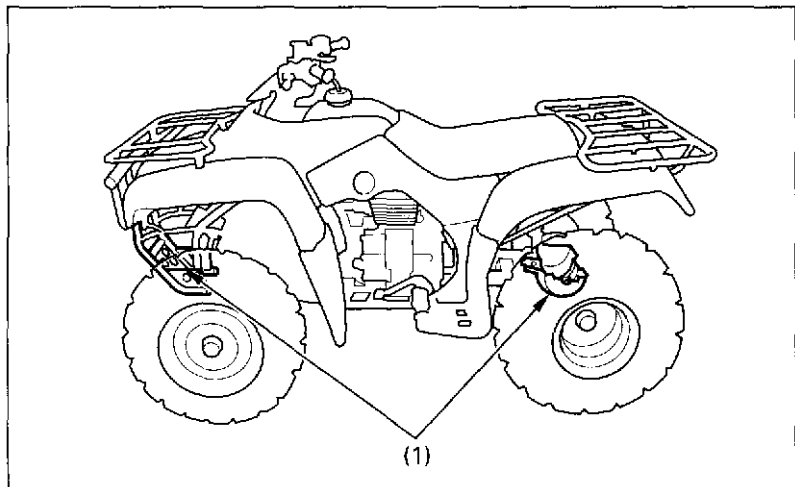


Fig. 4-34

(1) Skid plates