

### **Flooded Engine**

If the engine does not start after pushing the starter button several times, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch  $\otimes$  (OFF).
2. Move the choke knob to the OFF position.
3. Hold the throttle fully open and briefly press the starter button several times.
4. When the engine is cleared, wait 10 seconds. Then turn the engine stop switch to  $\bigcirc$  (RUN) and repeat the normal starting procedure, but don't use the choke.

### **Low Battery**

If the battery is low or dead, use the recoil starter (page 18) to start the engine.

### **High Altitude Adjustment**

For operation above 1,000 m (3,000 feet), it may be necessary to switch to high altitude carburetor jetting (see page 99).