

MAINTENANCE AND REPAIRS

MAINTENANCE SCHEDULE

D U	FREQUENCY ITEMS	Whichever comes first ↷	INITIAL	REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL		
			mi	600	1200	
		km	150	1000	2000	
NOTE	HOURS	20	100	200		
*	FUEL LINE				I	—
*	THROTTLE OPERATION				I	92
*	CARBURETOR CHOKE				I	97
	AIR CLEANER	(NOTE 1)		C	C	93–95
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)		I	I	96
	SPARK PLUG			I	I	105
*	VALVE CLEARANCE		I	I	I	106
	ENGINE OIL		R	R	R	100–103
**	ENGINE OIL STRAINER SCREEN				C	—
**	ENGINE OIL CENTRIFUGAL FILTER				C	—
*	ENGINE IDLE SPEED		I	I	I	97

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate