

Carburetor

Adjusting Idle Speed and Air-Fuel Mixture

NOTE:

Do not try to compensate for faults in other systems by adjusting the carburetor.

To adjust the idle speed:

1. Warm up the engine. The engine must be warm for accurate idle adjustment. Ten minutes of stop-and-go riding is sufficient.
2. Adjust idle speed by attaching a tachometer and using a screwdriver to turn the screwdriver by turning the throttle stop screw (Fig. 4-8).

Idle Speed:

1,400 ± 100 rpm