

Crossing slopes	78
D	
Decompressor lever	20
Dimmer switch	24
Dipstick	32, 103
Direct current (DC) power	
Receptacle	36
Special plug	36
Driveshaft boots	138
E	
Engine	
Break-in procedures	II
Flooded engine	62
Engine guard and skid plates	135
Starting the engine	61
Engine oil	
Changing oil	105
Checking oil level and adding oil	103
Oil filler cap/dipstick	32
Oil filter	105
Oil temperature warning lamp	24
Recommendations	104
Engine stop switch	15
Exhaust system	
Cleaning	40
Purging	136
F	
Final gear case oil	108
Flag pole bracket	34
Flooded engine	62
Fuel	
Fuel recommendations	90
Fuel strainer screen	92
Fuel tank cap	30, 88
Fuel tank cap vent lever	30
Fuel tank capacity	88
Fuel valve	30
High altitude fuel mixture adjustment	102