

ITEMS	FREQUENCY	Whichever comes first ↪	INITIAL	REGULAR		Refer to page	
			MAINTENANCE	MAINTENANCE INTERVAL			
			mi	100	600		1200
			150	1000	2000		
		NOTE	HOURS	20	100	200	
DRIVE SHAFT BOOTS						—	
FRONT GEAR CASE OIL, REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)		110 – 113	
* BRAKE FLUID	(NOTE3)					126	
* BRAKE SHOE WEAR	(NOTE1)					123	
BRAKE SYSTEM						123 – 132	
* REVERSE LOCK SYSTEM						117	
SKID PLATES, ENGINE GUARD						139	
* CLUTCH SYSTEM						116	
* SUSPENSION						—	
* SPARK ARRESTER				C	C	140	
* NUTS, BOLTS, FASTENERS						—	
** WHEELS/TIRES						133 – 137	
** STEERING SHAFT HOLDER BEARINGS						—	
** STEERING SYSTEM						—	

- * SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.
IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY
- ** BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
2. Service more frequently after riding in very wet or muddy conditions.
3. Replace every 2 years. Replacement requires mechanical skill.