


3. Spray the inside of the fuel tank with an aerosol rust-inhibiting oil. Reinstall the fuel cap.
4. Remove the spark plug and pour one tablespoon (15–20 cc) of clean engine oil into the cylinder.  
Operate the starter for a few seconds to distribute the oil, then reinstall the spark plug. (Make sure the engine stop switch is  (OFF) before pressing the starter button.)
5. Remove the battery (page 119) and store it in an area protected from freezing temperatures and direct sunlight and out of the reach of children, slow charge the battery once a month.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Allowing open flames or sparks near the battery.**

### **WHAT CAN HAPPEN**

**Gases may explode and possibly cause injury.**

### **HOW TO AVOID THE HAZARD**

**Do not allow open flames or sparks near the battery.**

6. Wash and dry the FOURTRAX, and wax all painted surfaces.
7. Inflate the tyres to their recommended pressures.
8. Place the FOURTRAX on blocks to raise all four tyres off the ground.