

Spark arrester	132
Spark knock	86
Spark plug	104
Specifications	139
Stalling on a hill	67, 69
Starter button	16
Starting primer knob	16
Storage compartment	31
Storing procedures	136

T

Throttle	
Cable	90
Lever	19, 90
Tires	
Inflation and air pressure	125
Repairing	128
Specifications	125
Tread condition	127
Tool kit	82
Trailer hitch	30
Trailer towing	
Operational guidelines	40
Weight limits	39
Transporting procedures	134
Turning	
On level ground	62
On slopes	75

V

Valve clearance	105
-----------------------	-----

W

Warning labels	7
Warranty service	142
Water	
Draining from brakes	123
Riding through	77
Weight limits	39
Wheel removal	124
Wiring diagram	140