

## FUEL SYSTEM

### FUEL

#### Refueling

Fuel tank capacity is 3.3 US gal (12.5 ℓ), including 0.7 US gal (2.5 ℓ) in the reserve supply.

To refuel, remove the fuel fill cap (Fig. 4-2) by twisting it counterclockwise. Do not overfill (make sure there is no fuel in the filler neck). After adding fuel, tighten the fuel fill cap firmly by turning it clockwise. Align the arrow (2) on the cap with the reference mark (3) on the fuel tank.

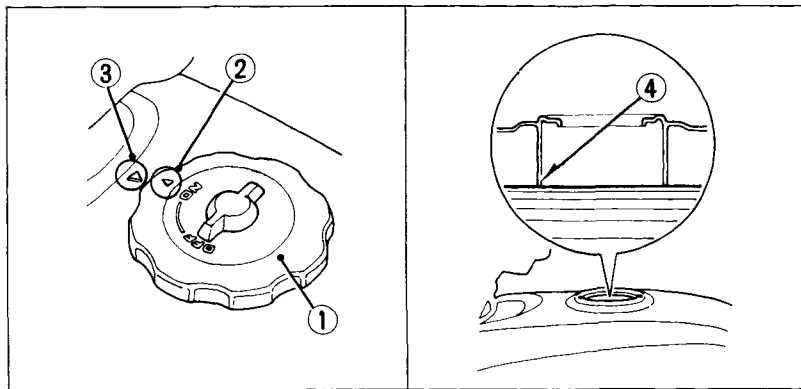


Fig. 4-2

(1) Fuel fill cap

(2) Arrow

(3) Reference mark

(4) Filler neck