

## SKID PLATES

The skid plate (Fig. 4-35) protect the frame, lower arm, rear final gear case and the rear brake. Check the plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Have the skid plate replaced if it is cracked or damaged. If the plate bolts are loose, tighten them securely.

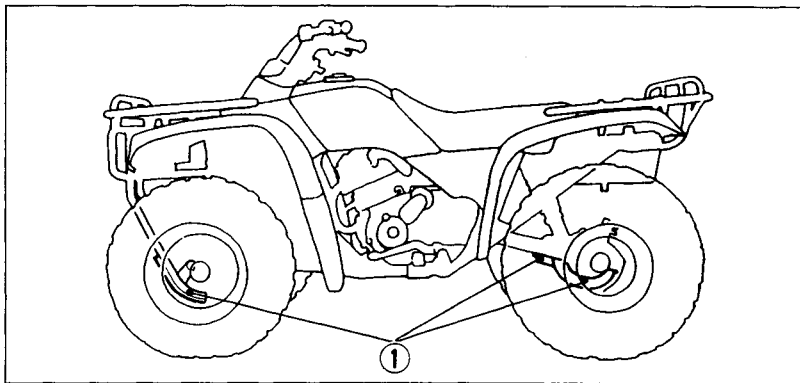


Fig. 4-35

(1) Skid plates