

## FUEL STRAINER SCREEN

The fuel strainer (Fig. 4-3) is in the fuel valve. The strainer has a fine mesh screen (2) which prevents dirt from entering the carburetor passages. Dirt which accumulates in the screen must be removed periodically, or the fuel flow will eventually be restricted.

To clean the fuel strainer screen:

1. Turn the fuel valve OFF.
2. Remove the fuel strainer cup (1) and the O-ring (3).
3. Remove the strainer screen (2).
4. Wash the screen in nonflammable or high flash point solvent.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Using gasoline or low flash point solvents for cleaning ATV parts.**

#### **WHAT CAN HAPPEN**

**A fire or explosion could result.**

#### **HOW TO AVOID THE HAZARD**

**Use only a nonflammable or high flash point solvent to clean ATV parts.**