

- Wash the air cleaner in nonflammable or high flash point solvent and allow it to dry thoroughly.

⚠ WARNING

POTENTIAL HAZARD

Using gasoline or low flash point solvents for cleaning ATV parts.

WHAT CAN HAPPEN

A fire or explosion could result.

HOW TO AVOID THE HAZARD

Use only a nonflammable or high flash point solvent to clean ATV parts.

- Soak the air cleaner in Pro Honda Foam Filter Oil or an equivalent [Canadian Vehicles: gear oil (SAE 80–90)] until saturated, then squeeze out the excess oil.

CAUTION:

Twisting the air cleaner when squeezing out excess oil could damage the air cleaner.

- Reassemble by reversing the disassembly sequence.

Dust Cover (California only)

Do not push the dust cover (1) (Fig. 4-7) into the air cleaner housing (2). If the dust cover is dirty, clean it.

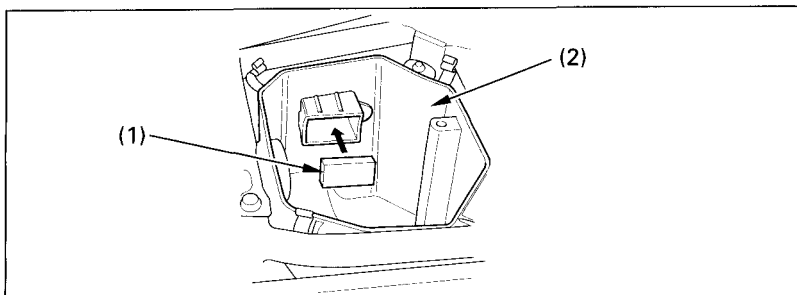


Fig. 4-7

(1) Dust cover

(2) Air cleaner housing