

## MAINTENANCE SCHEDULE

	FREQUENCY	Which ever comes first	INITIAL		REGULAR		Refer to page		
			ITEMS	↔	MAINTENANCE	MAINTENANCE INTERVAL			
					mi	600		1200	
					km	1000		2000	
NOTE	HOURS	20	100	200					
EMISSION RELATED ITEM	*	FUEL LINE				I	—		
	*	FUEL STRAINER SCREEN				C	90,91		
	*	THROTTLE OPERATION				I	92		
	*	CARBURETOR CHOKE				I	97		
		AIR CLEANER	(NOTE 1)			C	C	93–95	
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	96	
		SPARK PLUG				I	I	106,107	
	*	VALVE CLEARANCE				I	I	I	107
		ENGINE OIL				R	R	R	28,100,101
		ENGINE OIL FILTER				R	R	R	102–104
	*	ENGINE IDLE SPEED				I	I	I	98

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean      R: Replace

A: Adjust     L: Lubricate