

	FREQUENCY	ITEMS	Which ever comes first ↩	INITIAL		REGULAR		Refer to page
				MAINTENANCE		MAINTENANCE INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
NOTE	HOURS	20	100	200				
		REAR FINAL GEAR CASE OIL				(R: EVERY 2YEARS)		105
NON EMISSION RELATED ITEM	*	BRAKE FLUID	(NOTE3)					118-119
	*	BRAKE SHOE WEAR	(NOTE1)					115,120
		BRAKE SYSTEM						115-124
	*	REVERSE LOCK SYSTEM						109
		SKID PLATES, ENGINE GUARD						131
	*	CLUTCH SYSTEM						108
	*	SUSPENSION						-
	*	SPARK ARRESTER				C	C	132
	*	NUTS, BOLTS, FASTENERS						-
	**	WHEELS/TIRES						125-129
**	STEERING SHAFT HOLDER BEARINGS						-	
**	STEERING SYSTEM						-	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.