

Tire Tread Condition

To check the condition of a tire tread, measure the groove depth (1) (Fig. 4-34) in the center of the tire, or check the wear indicator (2). The minimum tread depth is 3/16 in (4 mm). When the tread depth is less than recommended, the tire should be replaced.

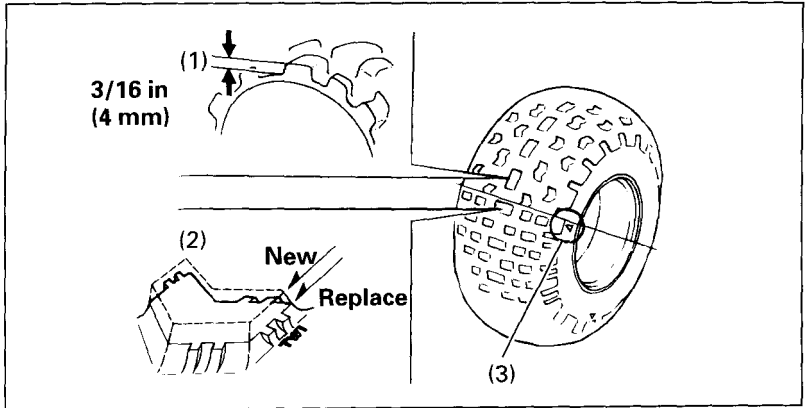


Fig. 4-34

- (1) Groove depth
- (2) Wear indicator

- (3) Wear indicator location mark