


# Brakes

---


## Draining Water from Brakes

Refer to *Safety Precautions* on page 91 .

### FRONT

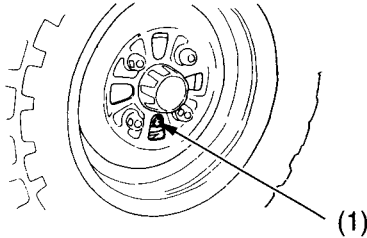

### RIGHT REAR

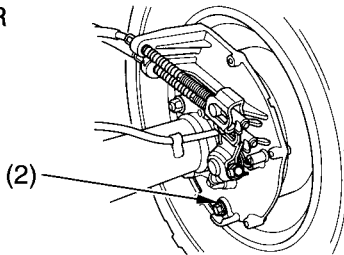

- (1) front brake inspection hole plug
- (2) rear brake drain bolt

1. Make sure the engine is off and the parking brake is set.
2. Remove the front brake inspection hole plug ( 1 ).
3. Remove the rear brake drain bolt ( 2 ) from the bottom of the rear brake cover.

If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.