

CONTENTS

| | Page |
|--------------------------------------|------|
| MAINTENANCE AND REPAIRS | 89 |
| Emission Requirements | 89 |
| Maintenance Schedule | 90 |
| Maintenance Precautions | 92 |
| Tool Kit | 93 |
| Fuel System | 94 |
| Lubrication | 106 |
| Engine | 114 |
| Clutch | 116 |
| Electrical System | 118 |
| Brakes | 125 |
| Wheels and Tires | 135 |
| Seat Removal | 140 |
| Engine Guard and Skid Plates | 141 |
| Spark Arrester | 142 |
| Driveshaft Boots | 144 |
| TRANSPORTING YOUR FOURTRAX | 146 |
| CLEANING YOUR FOURTRAX | 149 |
| STORING YOUR FOURTRAX | 151 |
| SPECIFICATIONS | 154 |
| WIRING DIAGRAM | 156 |
| CONSUMER INFORMATION | 158 |
| WARRANTY SERVICE | 160 |
| SERIAL NUMBERS AND COLOR LABEL | 161 |
| INDEX | 162 |
| AUTHORIZED MANUALS | 169 |