


# Controls & Features

---

## Throttle Lever

### RIGHT HANDLEBAR

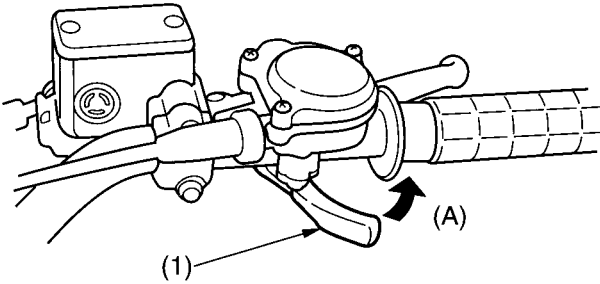

(1) throttle lever

(A) to open the throttle

The throttle controls rpm (speed). To increase engine rpm, press the lever (1) with your thumb. To reduce engine rpm, release pressure on the lever. The throttle will automatically return to the closed position (engine idle) when you remove your thumb.