

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			↔	mi	100	600	1200	
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE SHAFT BOOTS						148
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R-EVERY 2 YEARS)		107
	*	BRAKE FLUID	NOTE 3					127
	*	BRAKE SHOE WEAR	NOTE 1					137
		BRAKE SYSTEM						126
	*	REVERSE LOCK SYSTEM						120
		SKID PLATES, ENGINE GUARD						146
	*	CLUTCH SYSTEM						119
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	147
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 200).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.