

12V DC Power Supply

The direct current receptacle (1) is on the right side of the headlight. It provides 12V DC power at a maximum of 60 watts (5 Amps). The specified fuse is 15A.

WARNING

* *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire could result.*



(1) Receptacle


Accessories may be connected to the receptacle by using the special plug (2) that came with your TRX.

To attach the special plug to the accessory:

1. Install the accessory leads to the plug, making sure to connect the positive and negative leads to the corresponding plug terminals.

CAUTION

* *Do not install the positive and negative accessory leads in reverse when attaching them to the special plug.*

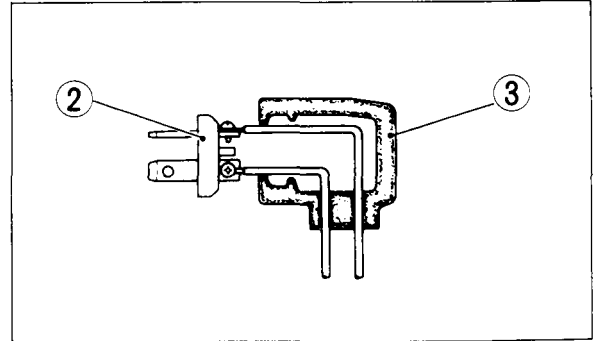

(2) Special plug

(3) Plug cover