

Fuel Tank

The fuel tank is located under the seat. To fill the fuel tank, remove the seat. Fuel tank capacity is 10.5 ℓ (2.78 US gal) including 2.0 ℓ (0.52 US gal) in the reserve supply.

To remove the fuel tank cap (1), turn the lever (2) clockwise.

Automotive gasoline with a pump octane number (R_2^+M) of 86 or higher, or research octane number of 91 or higher may be used.

If knocking or pinging occurs, try a different brand of gasoline or a higher octane grade.

CAUTION:

- * Should knocking or pinging persist while holding a steady speed on a level road, try changing brands of gasoline. If knocking or pinging still persists, consult your Honda dealer.

With the “△” mark on the cap facing the front, press down on the base (1) of the cap until locks.

NOTE:


- * Check that the breather tube (2) is connected securely.
- * Make sure that the lever (3) on the cap aligns with the “△” mark on the cap.

WARNING

- * *Gasoline is extremely flammable and is explosive*

under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the vehicle is refueled or where gasoline is stored.

- * *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed securely.*
- * *Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.*

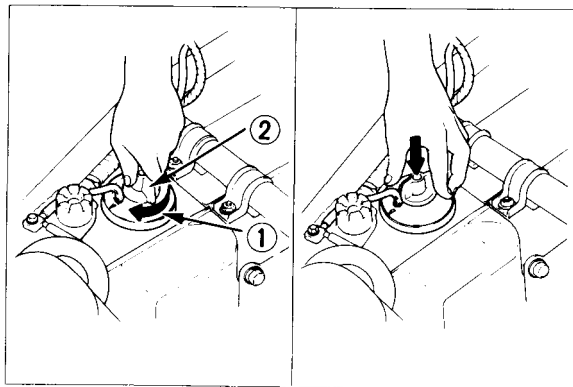

(1) Fuel tank cap (2) Cap lever