

FUEL FILTER

The fuel filter (1) is under the rear fender. A cartridge type filter using a paper element is utilized to prevent dirt from entering the carburetor passage. The filter must be replaced periodically, or the fuel flow will eventually be restricted.

WARNING


- * *Gasoline is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area.*

Fuel Filter Replacement:

1. Turn the fuel valve OFF.
2. Disconnect the fuel lines (2) from the fuel filter (1). Discard the filter.
3. Connect a new filter to the fuel lines.

NOTE:

- * Install the filter with the arrow (3) in the normal direction of fuel flow.
 - * Check the fuel lines for damage or deteriorations. Replace them if necessary.
4. Start the engine and check for leaks.

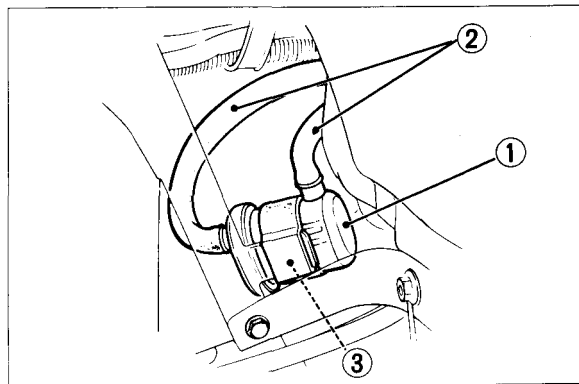

- (1) Fuel filter
(2) Fuel lines

(3) Arrow mark