

## GEARSHIFT CONTROLS

### Gearshift Switches

Two gearshift switches (Fig. 2-22) are located next to the left handlebar grip: upshift ( ⬆ ) and downshift ( ⬇ ).

Your FOURTRAX has five forward gears: 1, 2, 3, 4, and 5.

To upshift the transmission, press the upshift switch (1) once.

To downshift the transmission, press the downshift switch (2) once.  
(For complete operational instructions, see page 71 ).

### NOTE:

- \* The transmission cannot be upshifted from neutral to first gear or neutral to reverse when the engine speed is above 3,000 rpm or the ground speed is above 2 mph (3 km/h).
- \* The transmission cannot be downshifted from 1st gear to neutral when the ground speed is above 2 mph (3 km/h).

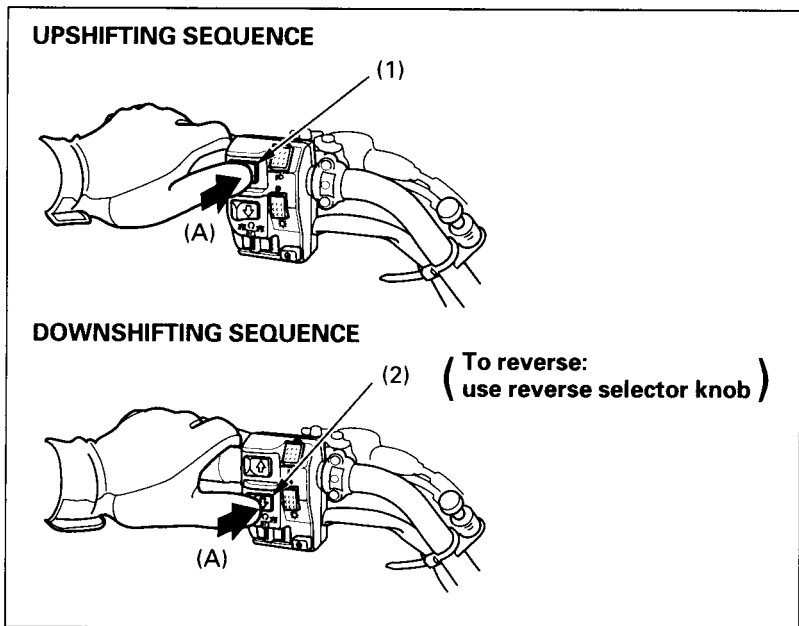


Fig. 2-22

(1) Upshift switch  
(2) Downshift switch

(A) Push