


# Controls & Features

---

## Fuel Valve

### LEFT SIDE

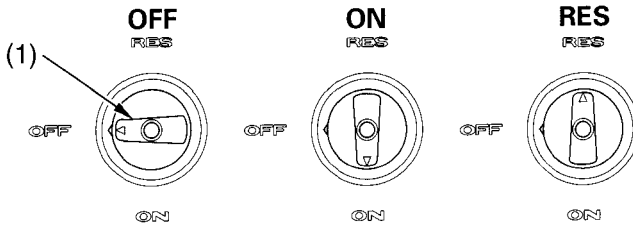

(1) fuel valve

The manual fuel valve is located on the left side of the fuel tank cover.

The three-way fuel valve is used to control the flow of fuel from the fuel tank to the carburetor.

ON — normal position for riding.

OFF — for parking, storing, or transportation.

RES — for extra fuel to get to a gas supply for refueling.

### Reserve Fuel

Remember to check that the fuel valve is in the ON position each time you refuel. If the valve is left in the RES position, you may run out of fuel with no reserve.

For complete information about fueling your ATV, see page 101.