
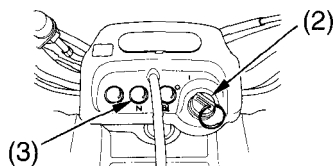


# Starting & Stopping the Engine



Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

## Preparation

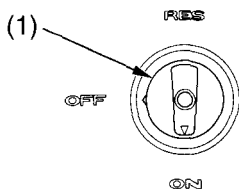

(Canada only)

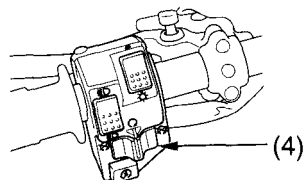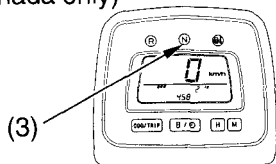

(1) fuel valve  
(2) ignition switch

(3) neutral indicator  
(4) engine stop switch

1. Before starting, select a level surface and lock the parking brake (page 31 ).
2. Turn the fuel valve ( 1 ) and ignition switch ( 2 ) to ON ( | ).

Confirm the following:

- The transmission is in NEUTRAL (neutral indicator ( 3 ) light ON).
- The engine stop switch ( 4 ) is set to RUN ( ○ ).

The oil high temperature indicator should go off a few seconds after the engine starts.