



# Starting & Stopping the Engine

---

## Flooded Engine

 
If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:


1. Move the engine stop switch to OFF (  ).
2. Push the choke knob down all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds (or operate the recoil starter several times).
5. Wait 10 seconds, then turn the engine stop switch to RUN (  ).
6. Repeat the “Normal Air Temperature” starting procedure, but don’t use the choke.



If the engine still won’t start, refer to *If Your Engine Quits or Won’t Start*, page 176 .

## How to Stop the Engine


### Normal Engine Stop

To stop the engine, make sure the transmission is in neutral by checking that the neutral indicator lights, and turn the ignition switch OFF (  ).

The engine stop switch should normally remain in the RUN (  ) position even when the engine is OFF.

If your ATV is stopped with the engine stop switch OFF (  ) and the ignition switch ON (  ), the battery will discharge.

### Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, move the switch to either OFF (  ) position.