


Brakes


Draining Water from Brakes

Refer to *Safety Precautions* on page 87 .

FRONT

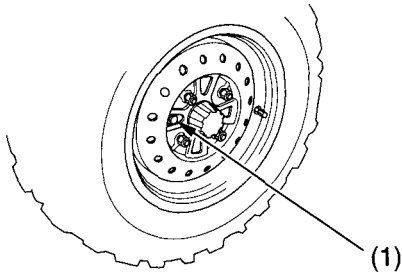

RIGHT REAR

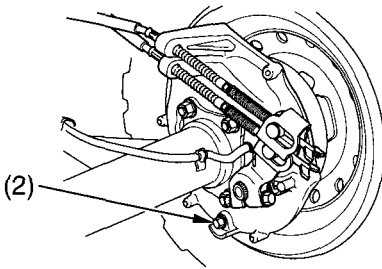

- (1) front brake inspection hole plug
- (2) rear brake drain bolt

1. Make sure the engine is off and the parking brake is set.
2. Remove the front brake inspection hole plug (1).
3. Remove the rear brake drain bolt (2) from the bottom of the rear brake panel.

If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.