

## Fuel Valve

The fuel valve (Fig. 2-26) is on the left side of the fuel tank, and it has three positions:

### OFF

When the fuel valve is in the OFF position, fuel cannot flow to the carburetor. Turn the valve OFF whenever the FOURTRAX is not in use.

### ON

When the fuel valve is in the ON position, fuel will flow from the main fuel supply to the carburetor.

### RES

When the fuel valve is in the RES position, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone.

Refill the tank as soon as possible after switching to RES. The reserve fuel supply is:

0.85 US gal (3.2 ℓ , 0.70 Imp gal)

### NOTE:

After refueling, do not operate the FOURTRAX with the fuel valve in the RES position. If you run out of fuel, there will be no reserve supply.

For gasoline recommendations and refueling instructions, see pages 94 – 97 .

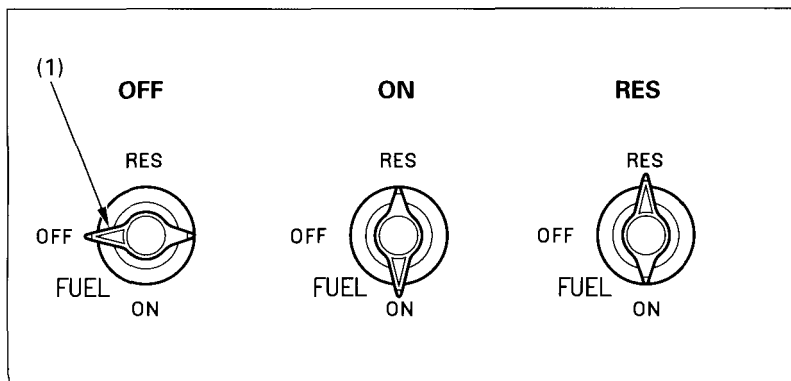


Fig. 2-26

(1) Fuel valve