

Neutral Indicator Lamp

The neutral indicator lamp (1) (Fig. 2-11) is located on the headlight case.

The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON (I).

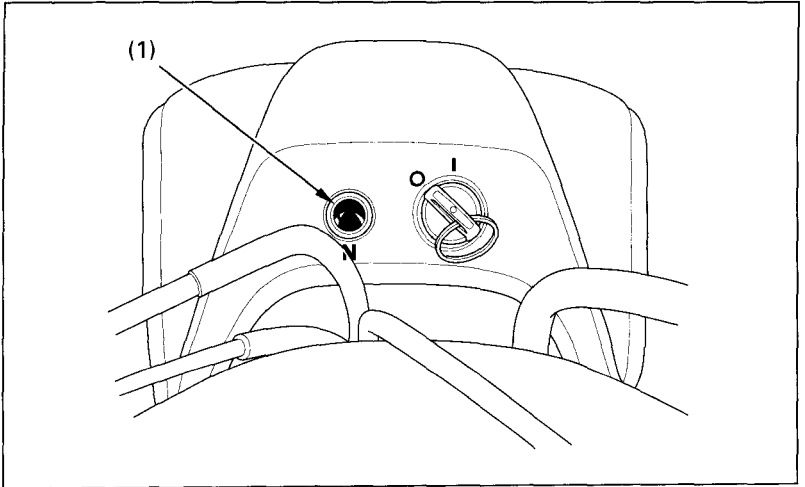


Fig. 2-11

(1) Neutral indicator lamp