

Starting & Stopping the Engine

Starting Procedure


The carburetor is equipped with an accelerator pump. Do not open the throttle when starting the engine. This will flood the engine with excess fuel, resulting in hard starting.

To restart a warm engine, follow the procedure for *High Air Temperature*.

The starter motor will operate only when the transmission is in neutral.

Normal Air Temperature 10° – 35°C (50° – 95°F)

LEFT SIDE

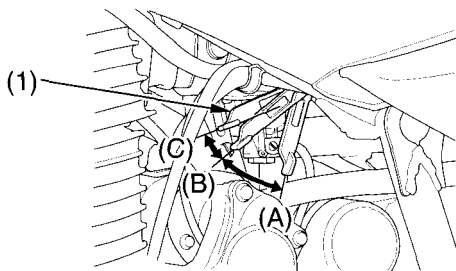

(1) choke lever

(A) fully OFF

(B) halfway position

(C) fully ON

1. Pull the choke lever (1) up all the way to fully ON (C) position, if the engine is cold.
 2. With the throttle slightly open, press the starter button.
- Pressing the electric starter button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the starter button for approximately 10 seconds before pressing it again.