

Engine Oil & Filter

4. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:
7 lbf·ft (10 N·m , 1.0 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 158).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

1. After the oil has drained, make sure the sealing washers on the drain bolts are in good condition.
2. Install the drain bolts and tighten to the specified torque:
Oil tank drain bolt:
14 lbf·ft (20 N·m , 2.0 kgf·m)
Crankcase drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
3. Fill the oil tank with the recommended grade oil approximately:
1.8 US qt (1.7 ℓ , 1.5 Imp qt)
4. Reinstall the oil filler cap and dipstick.
5. Start the engine and let it idle for 5 minutes.
6. Stop the engine and after a few minutes, remove the oil filler cap/dipstick.
7. Check that the oil is up to the upper level mark. Add oil, if necessary.
8. Reinstall the oil filler cap/dipstick.
9. Check for oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.