
## **Throttle**

## Throttle Freeplay

Refer to Safety Precautions on page 71.

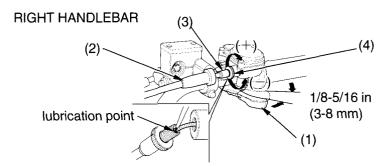

- (1) throttle lever
- (2) rubber sleeve
- (3) throttle cable adjuster
- (4) lock nut

- (+) increase freeplay
- (-) decrease freeplay

## Inspection

Check freeplay at the throttle lever (1)

Freeplay:

1/8-5/16 in (3-8 mm)

## Adjustment

- 1. Slide the rubber sleeve (2) back to expose the throttle cable adjuster (3).
- 2. Loosen the lock nut (4).
- 3. Turn the adjuster to obtain the correct freeplay.
- 4. Tighten the lock nut and reinstall the sleeve.
- 5. After adjustment, check for smooth operation of the throttle lever from fully closed to fully open in all steering positions.