

If Your Engine Quits or Won't Start

| SYMPTOM: Engine starts, but runs poorly. | |
|--|--|
| POSSIBLE CAUSE | WHAT TO DO |
| idles roughly, too fast, stalls | Check engine idle adjustment (page 104). If the problem persists, see your Honda dealer. |
| poor engine performance at altitudes above 3,000 feet. | Ask your Honda dealer to modify the carburetion with a high altitude jet. Refer to <i>High Altitude Carburetor Adjustment</i> , page 181. |
| runs erratically, misfires | See your Honda dealer. |
| blubbers (rich fuel mixture) | See your Honda dealer. |
| sooty exhaust (rich fuel mixture) | See your Honda dealer. |
| detonates or pings under load | If applicable, switch to the recommended octane gasoline (page 83) or change your brand of gasoline. If the problem persists, see your Honda dealer. |
| afterfires (backfires) | See your Honda dealer. |
| pre-ignition (runs on after ignition switched OFF) | See your Honda dealer. |