

# Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page	
				mi	100	600	1200		
				km	150	1000	2000		
				HOURS	20	100	200		
NON EMISSION RELATED ITEMS		DRIVE CHAIN	NOTE 1,2		I, L	(I, LEVERY 300mi (500km) or 50 operating hours)		133	
		DRIVE CHAIN SLIDER				I	I	133	
	*	BRAKE FLUID	NOTE 3			I	I	117	
	*	BRAKE PAD WEAR	NOTE 1,2				I	121	
		BRAKE SYSTEM			I		I	117	
		SKID PLATES, ENGINE GUARD					I	I	132
	*	CLUTCH SYSTEM			I		I	100	
	*	SUSPENSION					I	I	111
	*	SPARK ARRESTER					C	C	109
	*	NUTS, BOLTS, FASTENERS			I			I	—
	**	WHEELS/TIRES			I		I	I	125,165
	**	STEERING SHAFT HOLDER BEARINGS						I	—
	**	STEERING SYSTEM						I	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188 ).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.