


Parking Brake Adjustment

Refer to *Safety Precautions* on page 71 .


Parking brake adjustment may be required if the parking brake does not hold properly.

LEFT HANDLEBAR

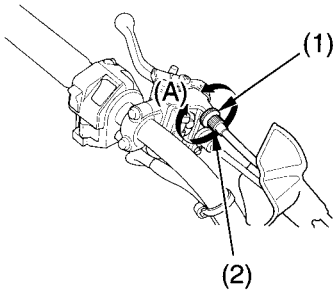

- (1) lock nut
- (2) adjuster

REAR

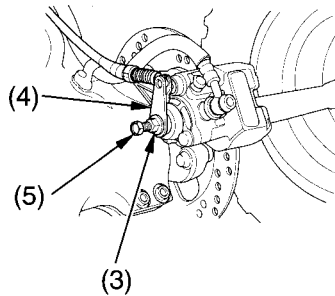

- (3) lock nut
- (4) parking brake arm
- (5) adjusting bolt
- (A) screw in

1. Temporarily adjust the clutch lever free play to more than 1 3/16 in (30 mm) (page 100).
2. Loosen the lock nut (1) on the parking brake cable, and screw in the adjuster (2) completely.
3. Loosen the lock nut (3) on the parking brake arm (4) and turn the adjusting bolt (5) clockwise until you feel resistance.
4. Then turn the adjusting bolt (5) 1/8 counterclockwise, and tighten the lock nut (3).