

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		km ↔ mi	HOURS	150	1000	2000	
				100	600	1200	
		NOTE		20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		103
AIR CLEANER					C	C	99
AIR CLEANER HOUSING DRAIN TUBE	NOTE 1				I	I	102
SPARK PLUG	NOTE 2				I	I	112
* VALVE CLEARANCE				I	I	I	115
ENGINE OIL				INITIAL=150km (100mi), 20 operating hours or 1 month : R REGULAR=Every 1000km (600mi), 100 operating hours or 12 months : R			90
ENGINE OIL FILTER				R	R	R	96
* ENGINE OIL STRAINER SCREEN IN OIL TANK						C	—
* ENGINE IDLE SPEED				I	I	I	110

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.