


Engine Oil & Filter

Drain the Engine Oil:

1. With the ATV on level ground, start the engine and let it idle for 3–5 minutes.
2. Stop the engine, place an oil drain pan under the oil tank and crankcase. Remove the oil filler cap/dipstick, the drain bolt A (1) on the oil tank and drain bolt B (2) on the left crankcase.

LEFT SIDE

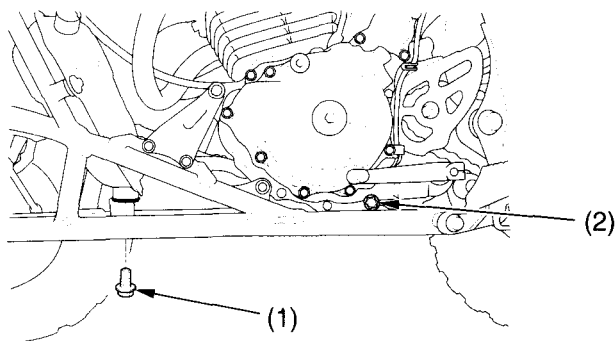

(1) drain bolt A

(2) drain bolt B

Install a New Engine Oil Filter:

1. Remove the oil filter cover (1) by removing the bolts (2). Let the remaining oil drain out. Discard the oil filter (3) in an approved manner (page 168).
2. Check that the oil filter cover O-ring (4) is in good condition and then install a new oil filter. Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.