

Engine Oil & Filter

Add Engine Oil:

1. After the oil has drained, make sure the sealing washers on the drain bolts are in good condition. If necessary, replace the sealing washers.
2. Reinstall the drain bolts and tighten to the specified torque:
 - Oil tank drain bolt:
20 N·m (2.0 kgf·m , 14 lbf·ft)
 - Crankcase drain bolt:
25 N·m (2.5 kgf·m , 18 lbf·ft)
3. Fill the oil tank with the recommended grade oil approximately:
1.7 ℓ (1.8 US qt , 1.5 Imp qt)
4. Reinstall the oil filler cap/dipstick.
5. Start the engine and let it idle for 3–5 minutes.
6. Stop the engine, wait 2–3 minutes and check the oil level. Make sure the oil is between the UPPER and LOWER level marks on the oil filler cap/dipstick. If necessary, add more oil but do not overfill.
7. Reinstall the oil filler cap/dipstick.
8. Check for oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.