


Reverse Lock System

Reverse Lock System Adjustment


Refer to *Safety Precautions* on page 75 .

RIGHT SIDE

4–8mm
(0.2–0.3in)

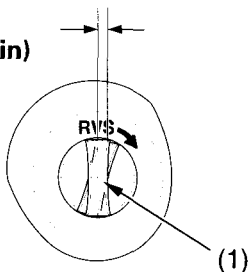

RIGHT SIDE

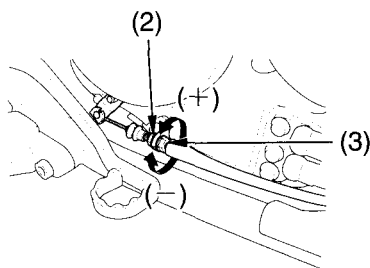

- | | |
|-------------------------|------------------------|
| (1) reverse assist knob | (+) increase freeplay |
| (2) lock nut | (-) decrease free play |
| (3) adjusting nut | |

1. Check the reverse assist knob (1) freeplay.
4–8 mm (0.2–0.3 in)
2. To adjust, loosen the lock nut (2) and turn the adjusting nut (3).
After adjustment, tighten the lock nut securely.

Other Inspection

Check the reverse assist knob and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.