

Tyres

Always check air pressure when your tyres are “cold.” If you check air pressure when your tyres are “warm” – even if your ATV has only been ridden for a few miles – the readings will be higher. If you let air out of warm tyres to match the recommended cold tyre pressures, the tyres will be underinflated. Be sure to check tyre pressure at the riding site, since changes in altitude can affect air pressure.

The recommended “cold” tyre pressures are:

	FRONT	REAR
RECOMMENDED PRESSURE	27 kPa (0.275 kgf/cm ² , 4.0 psi)	27 kPa (0.275 kgf/cm ² , 4.0 psi)
MAXIMUM PRESSURE	31 kPa (0.315 kgf/cm ² , 4.6 psi)	31 kPa (0.315 kgf/cm ² , 4.6 psi)
MINIMUM PRESSURE	23 kPa (0.235 kgf/cm ² , 3.4 psi)	23 kPa (0.235 kgf/cm ² , 3.4 psi)