

- If the cable adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster (3), a major adjustment must be made. Loosen the lock nut (4) and turn in the cable adjuster (3) completely. Tighten the lock nut (4) and pull on the dust cover (2).

NOTE:

If proper adjustment cannot be obtained or the clutch does not work correctly, the cable or clutch friction discs may be worn. See your authorized Honda dealer.

Other Checks:

Check the clutch cable for kinks or signs of wear that could cause sticking or failure. Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

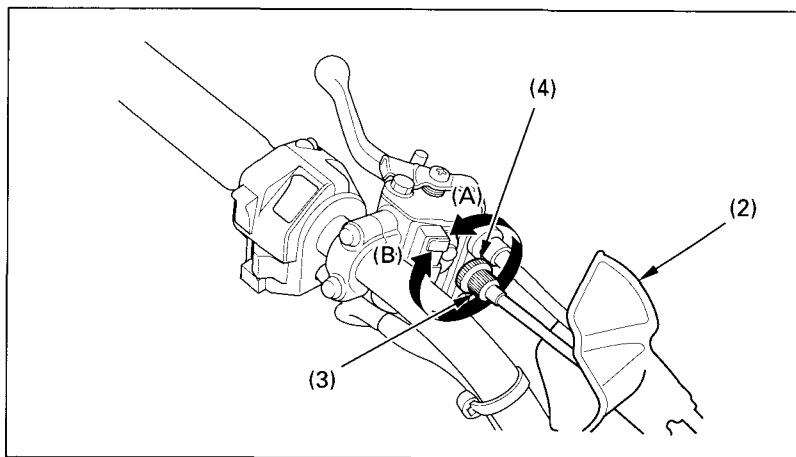


Fig. 4-20

- (2) Dust cover
- (3) Clutch cable adjuster
- (4) Lock nut

- (A) Decrease free play
- (B) Increase free play