

D U	FREQUENCY  ITEMS	Whichever comes first	INITIAL	REGULAR		Refer to page	
			MAINTENANCE	MAINTENANCE INTERVAL			
		↪	mi	100	600		1200
			km	150	1000		2000
NOTE	HOURS	20	100	200			
	DRIVE SHAFT BOOTS					138	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2YEARS)		105 – 107	
*	BRAKE FLUID	(NOTE3)				122 – 123	
*	BRAKE SHOE WEAR	(NOTE1)				127	
	BRAKE SYSTEM					119 – 128	
*	REVERSE LOCK SYSTEM					111	
	SKID PLATES, ENGINE GUARD					135	
*	CLUTCH SYSTEM					110	
*	SUSPENSION					—	
*	SPARK ARRESTER			C	C	136 – 137	
*	NUTS, BOLTS, FASTENERS					—	
**	WHEELS/TIRES					129 – 133	
**	STEERING SHAFT HOLDER BEARINGS					—	
**	STEERING SYSTEM					—	

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.  
2. Service more frequently after riding in very wet or muddy conditions.  
3. Replace every 2 years. Replacement requires mechanical skill.