

### **Reverse and Neutral Indicator Lamps**

The reverse indicator lamp ( 1 ) and the neutral indicator lamp ( 2 ) (Fig. 2-13) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON ( I ). The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON ( I ).