

	FREQUENCY ITEMS	Whichever comes first ↘	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
			mi	100	600	1200	
			km	150	1000	2000	
NOTE	HOURS	20	100	200			
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS				I	I	—
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)	I	106 – 107
	* BRAKE FLUID	(NOTE3)			I	I	122
	* BRAKE SHOE WEAR	(NOTE1)				I	127
	BRAKE SYSTEM			I	I	I	119 – 128
	* REVERSE LOCK SYSTEM			I	I	I	111
	SKID PLATES, ENGINE GUARD				I	I	135
	* CLUTCH SYSTEM			I	I	I	110
	* SUSPENSION				I	I	—
	* SPARK ARRESTER				C	C	136
	* NUTS, BOLTS, FASTENERS			I		I	—
	** WHEELS/TIRES			I	I	I	129 – 133
	** STEERING SHAFT HOLDER BEARINGS					I	—
	** STEERING SYSTEM					I	—

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.