



Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 95 .

Your ATV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks or engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid (page 182). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the seat (page 106), right side cover (page 114), left side cover (page 115) and then remove the oil filler cap from the front right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

UNDER ENGINE

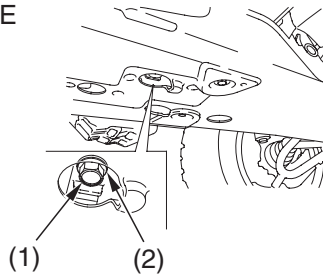

(1) engine oil drain plug (2) sealing washer

116 Servicing Your Honda